24/7 HD

User Handbook



Congratulations,

this $24/7hd^{TM}$ is yours.

Please read and understand this user handbook before operating this office chair.



24/7hd

Using & Adjusting Your 24/7hd™



Tension Knob

Turn clockwise to increase tension, turn counter-clockwise to decrease tension



Seat Depth Adjustment

Loosen hand wheel
(do not remove) and slide back
to desired position, then re-tighten



Pneumatic Height Adjustment

To lower, lift paddle while seated. To raise, lift paddle with your weight off seat.



Infinite Position Tilt Lock

To lock chair in position, push paddle down, to allow free movement, pull paddle up.



Arm Height Adjustment Turn clockwise to raise.

Turn clockwise to raise, counter clockwise to lower.



Horizontal Arm Adjustment

Simple finger-tip lever easily allows for horizontal arm adjustment while sitting. To adjust arm width, push lever down, move arm to desired position and pull lever up



Ratchet Height Adjustable Headrest

Lift headrest to desired position and headrest locks automatically. To lower headrest lift to top position and headrest can then be lowered to lowest position.

Care Instructions

With regular care and maintenance, your 24/7TM will provide many years of superior performance and satisfaction.

Mechanism

Oil sparingly moving parts once a year with light machine oil. NOTE: to prevent dripping, avoid over lubrication which may cause damage to surrounding surfaces.

Fabric

Clean with mild detergent and water applied with a clean damp cloth or sponge. Rinse with a damp (water) cloth and let dry. Never use hot water and avoid scrubbing. Use gentle movements.

Plastic Parts

To clean, spray with a mild detergent and wipe off using a damp (water) cloth. Do not use abrasives or excessive amounts of cleaner.

Frame

Powder coat frames can be cleaned by wiping with a damp cloth and any mild detergent.

